




 **320**

 **400**

 **460**


 **580**



- GB** Fitting instructions
- D** Montageanleitung
- F** Instructions de montage
- NL** Montage-instructies
- I** Istruzioni per il montaggio
- E** Instrucciones de montaje
- PT** Instruções de Montagem
- S** Monteringsanvisning
- FIN** Asennusohje
- EST** Paigaldusjuhend
- LAT** Stiprināšanas instrukcija
- LIT** Pritvirtinimo instrukcijos
- PL** Instrukcja montażu
- RU** Инструкции по установке
- CZ** Návod na montáž
- SK** Návod na montáž
- SLO** Navodila za pritrjevanje
- HR** Uputa za sastavljanje
- HU** A felszerelés módja
- GR** Οδηγίες συναρμολόγησης
- N** Monteringsanvisning


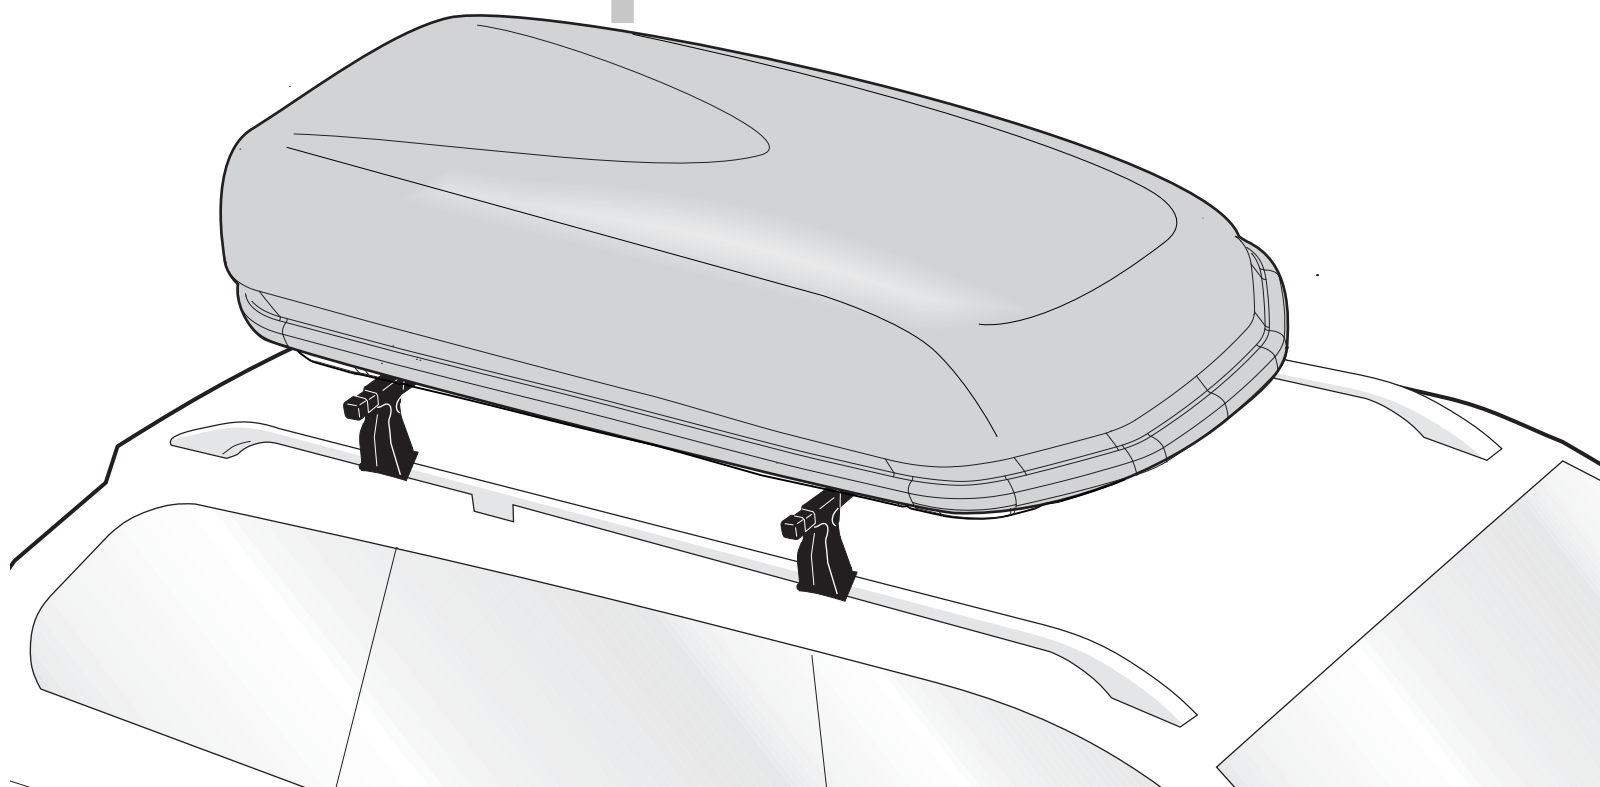


Model	 320	 400	 460	 580
	50	75	75	75
 = 	9	12	15	20
Fixing				


400/460/580




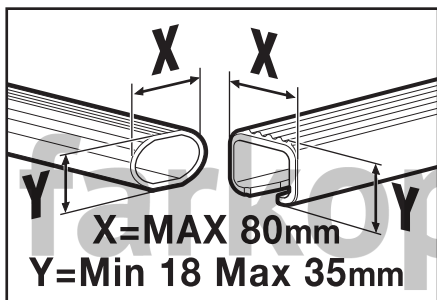


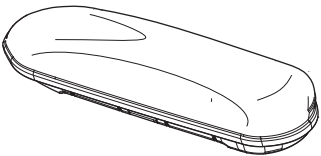
N.		Q.
1		1
2		1
3		1
4		4
5		4
6		4
7		4
8		4

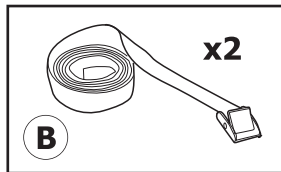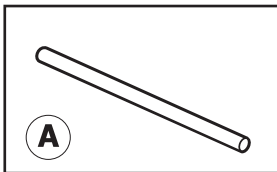



320

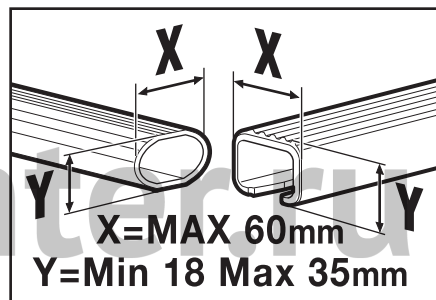

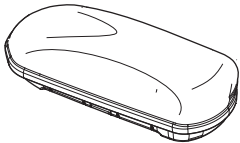
N.		Q.
1		1
2		1
3		1
9		4
10		4
11		8
12		4



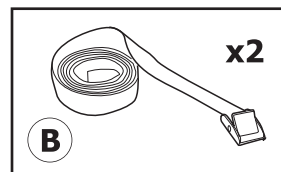


320/400/460/580

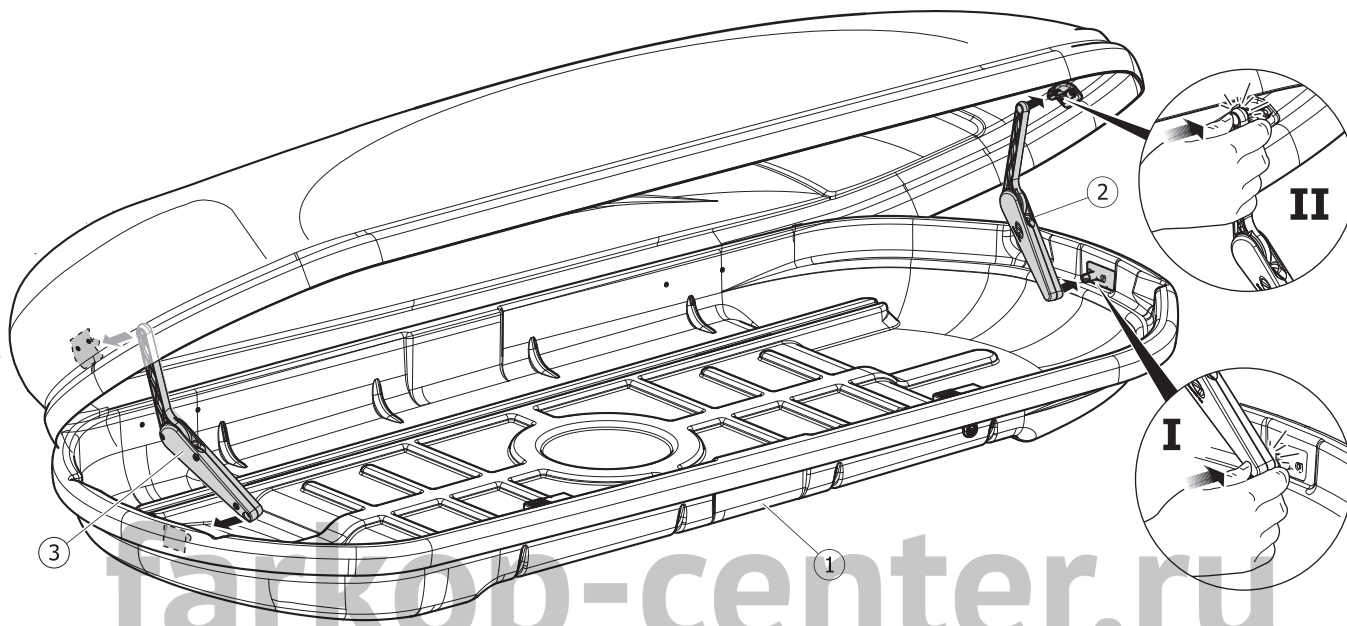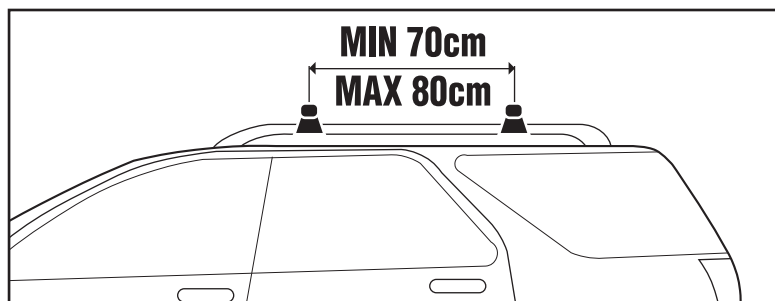


400/460/580

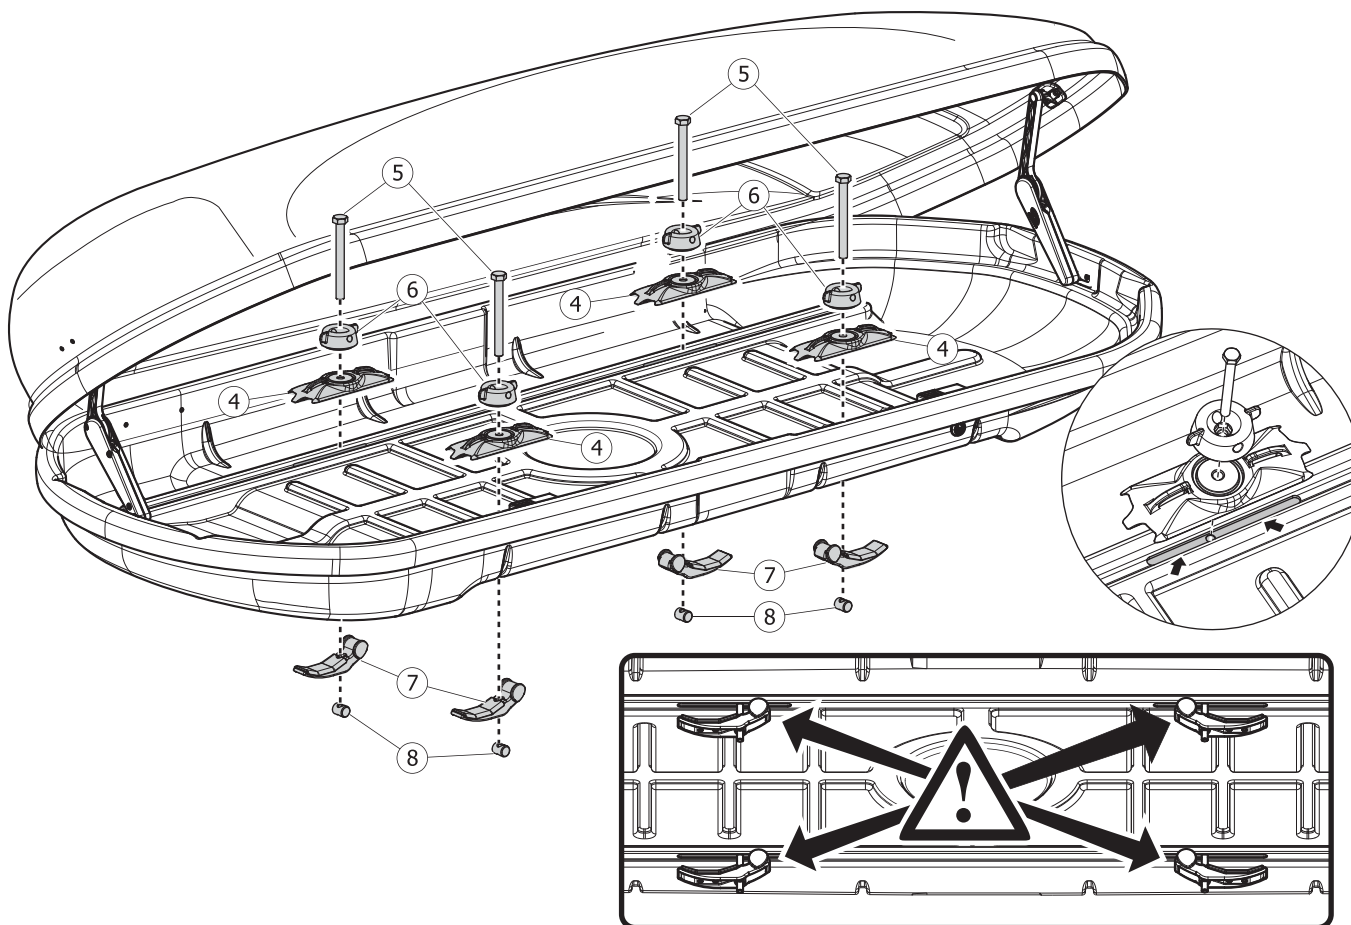


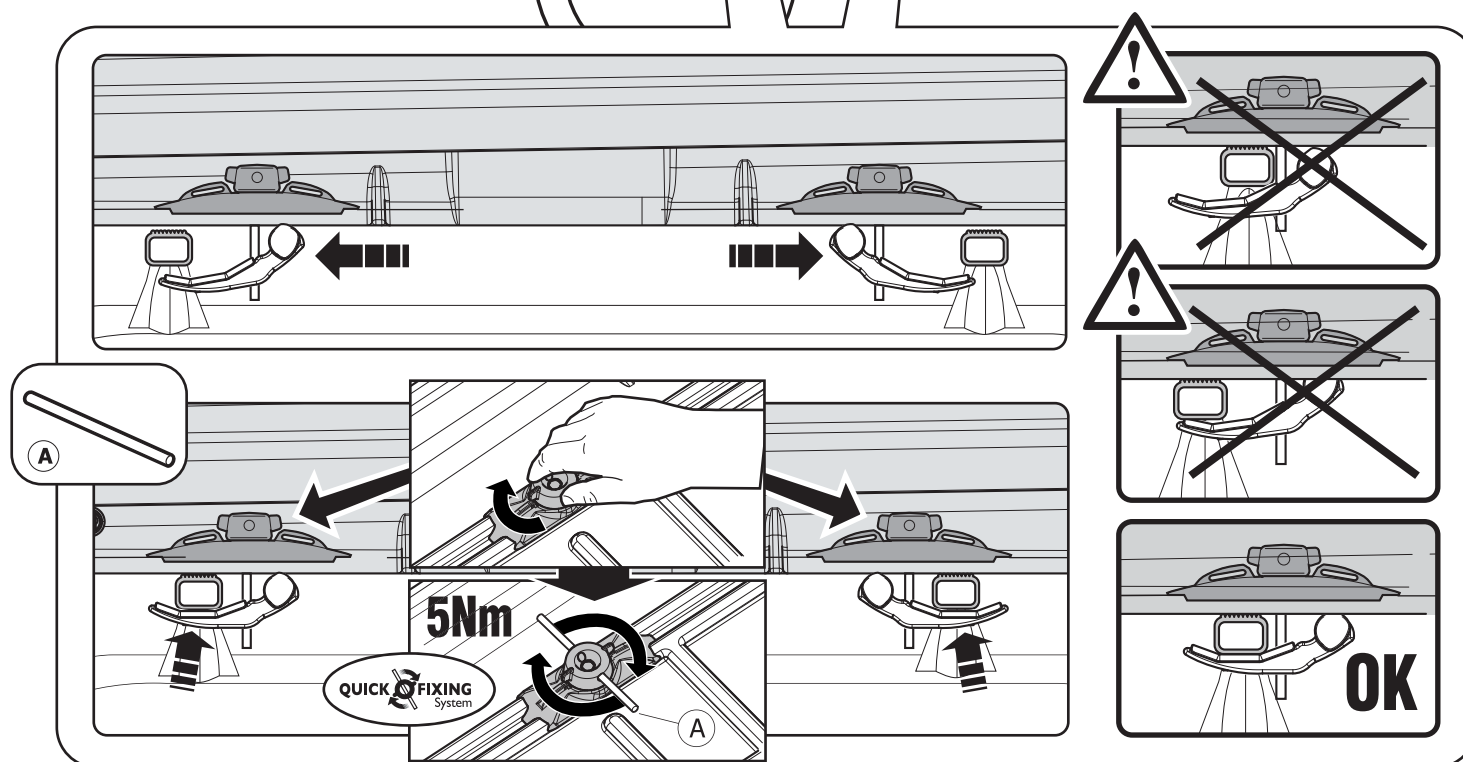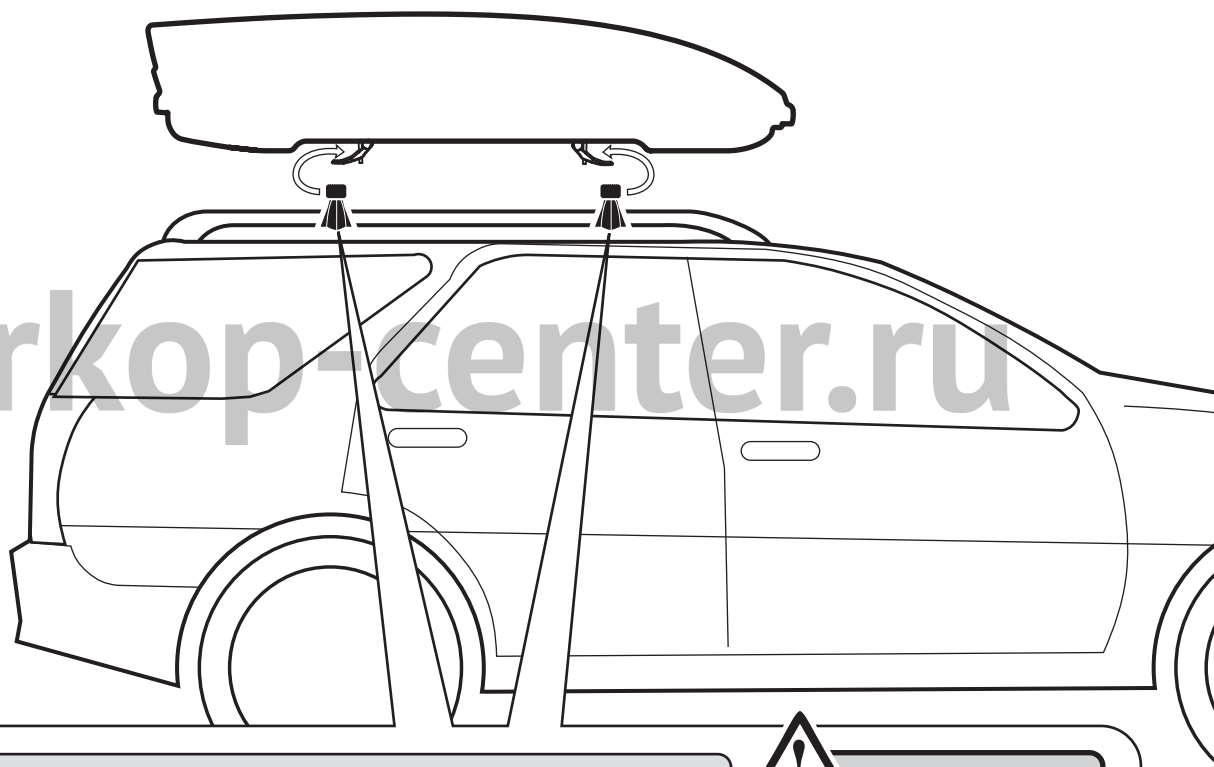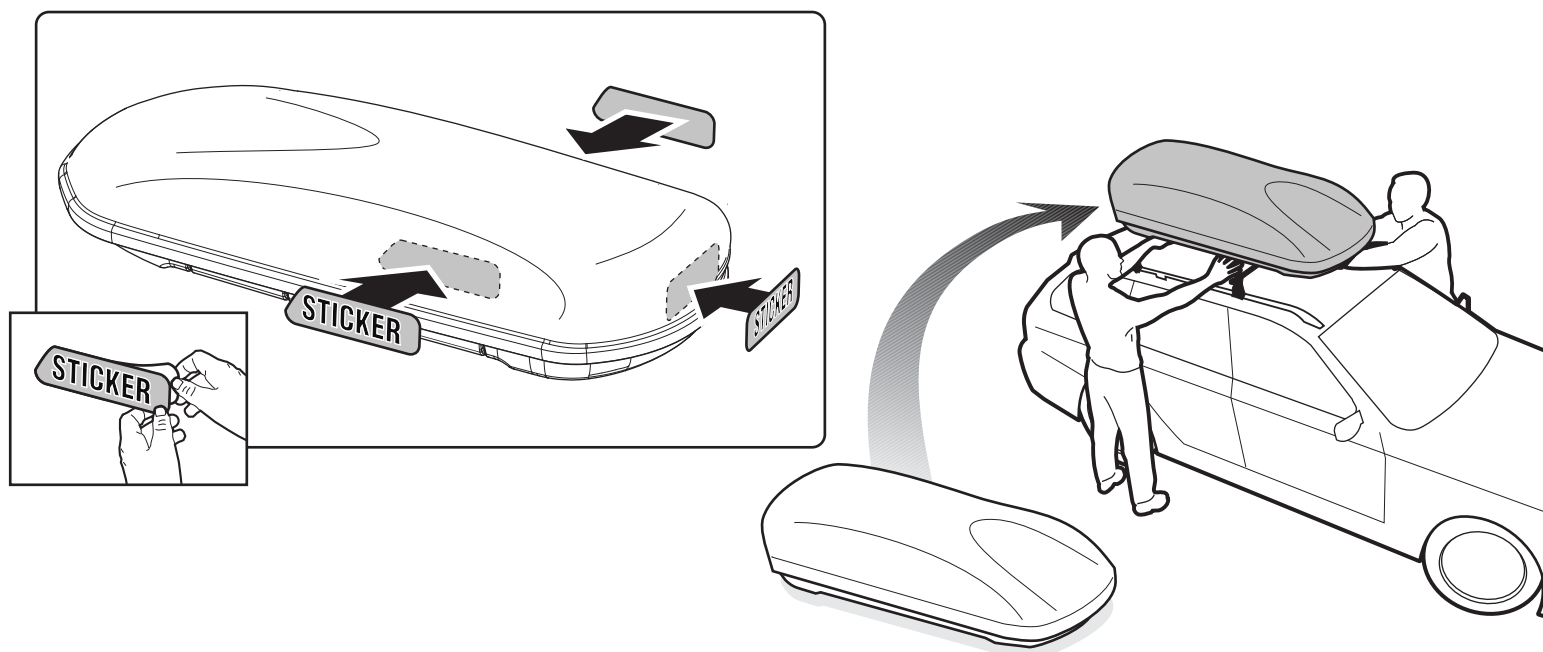






320

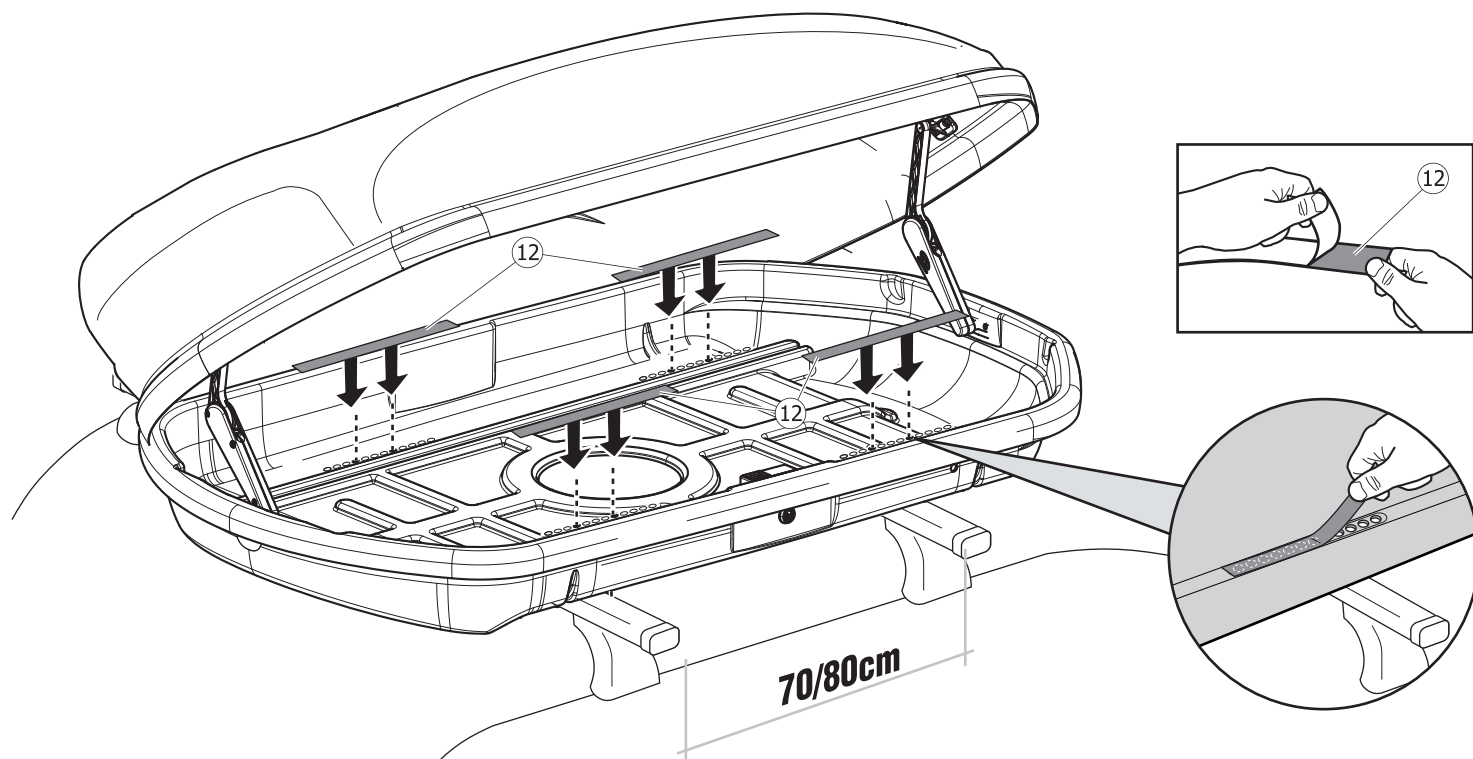




farkop-center.ru




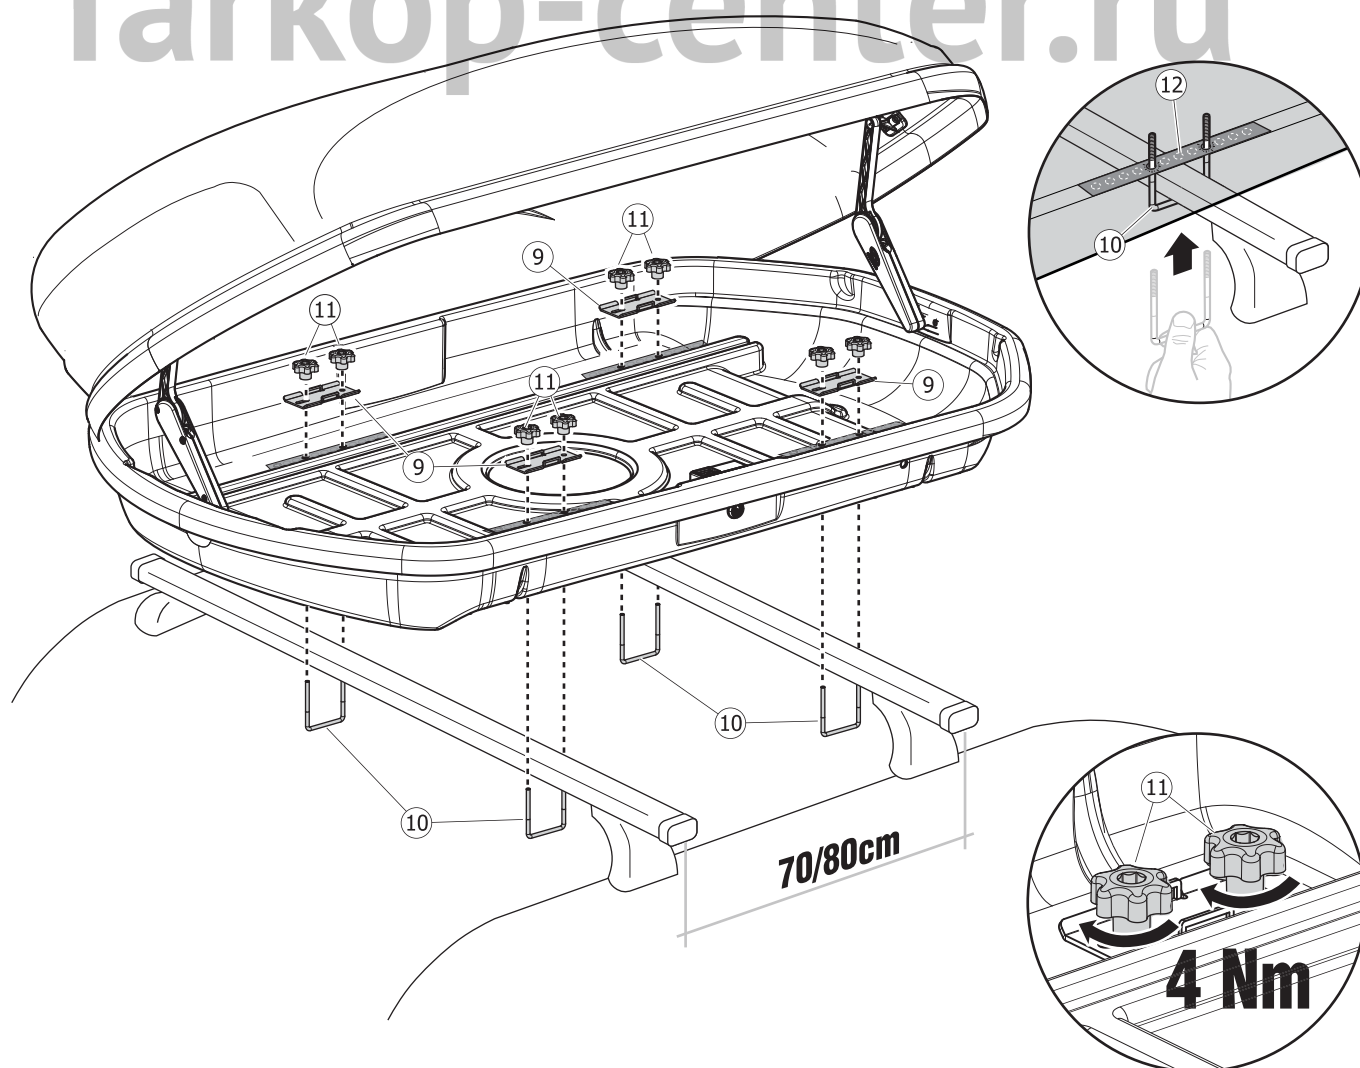


320/400/460/580

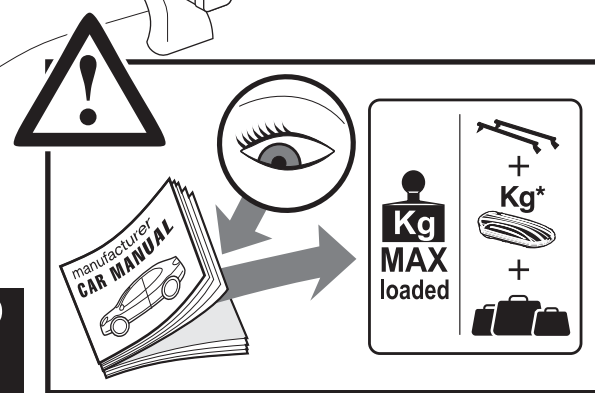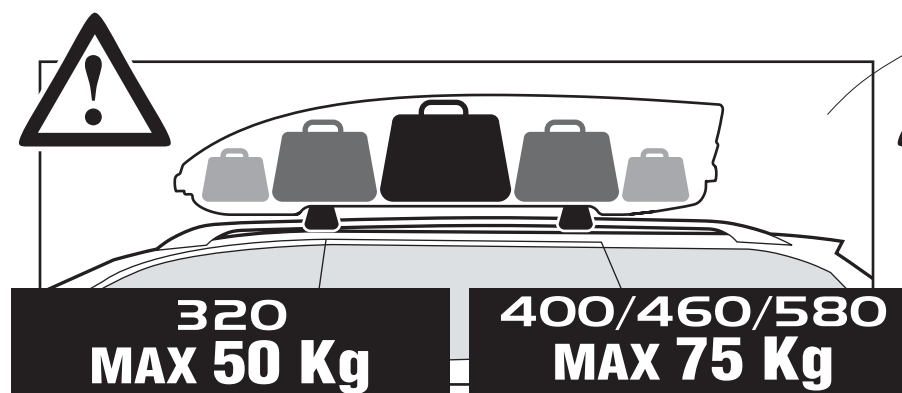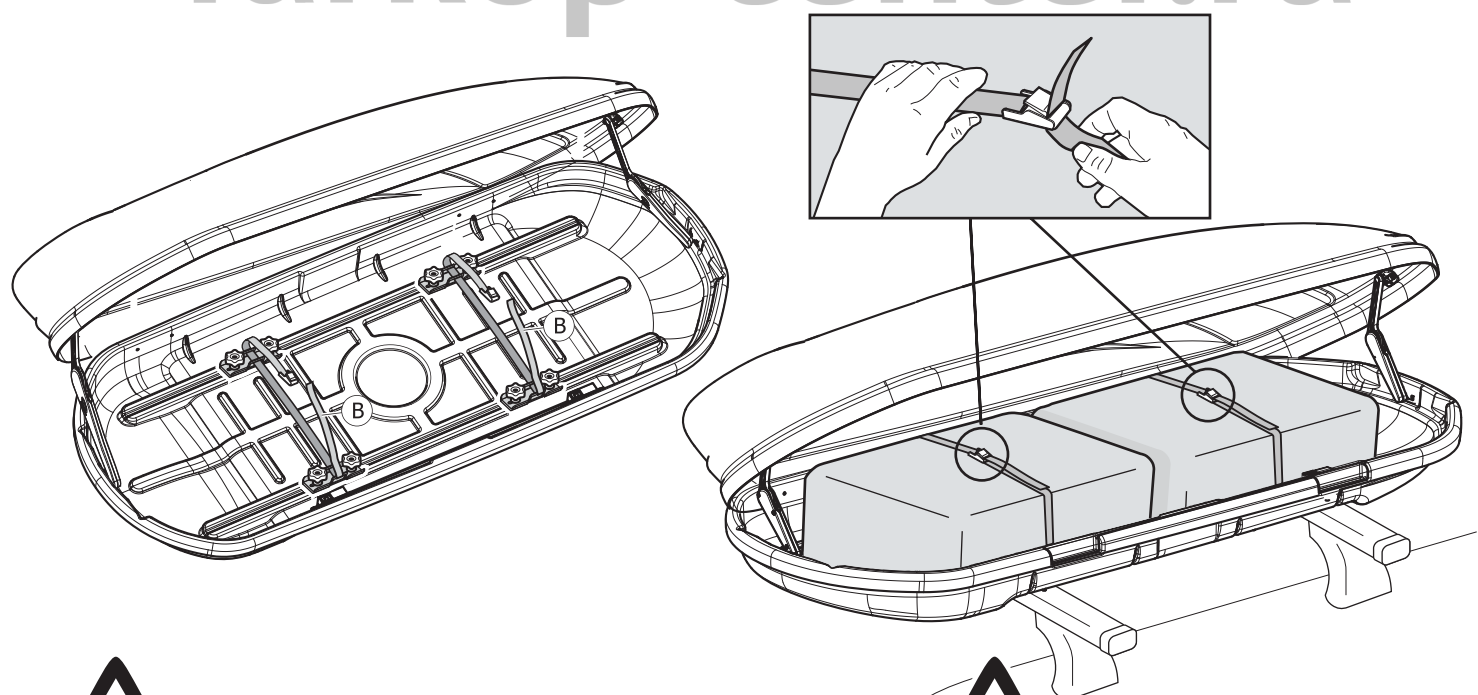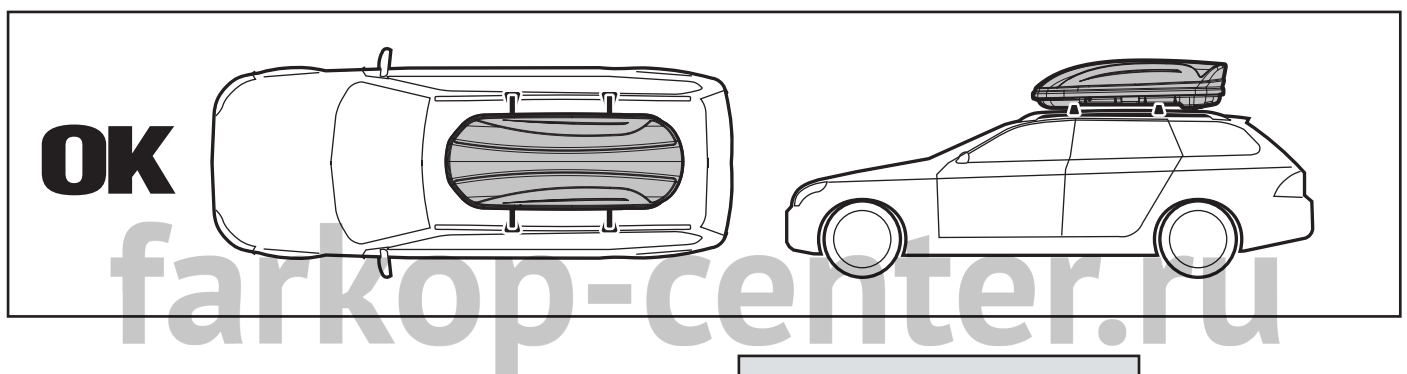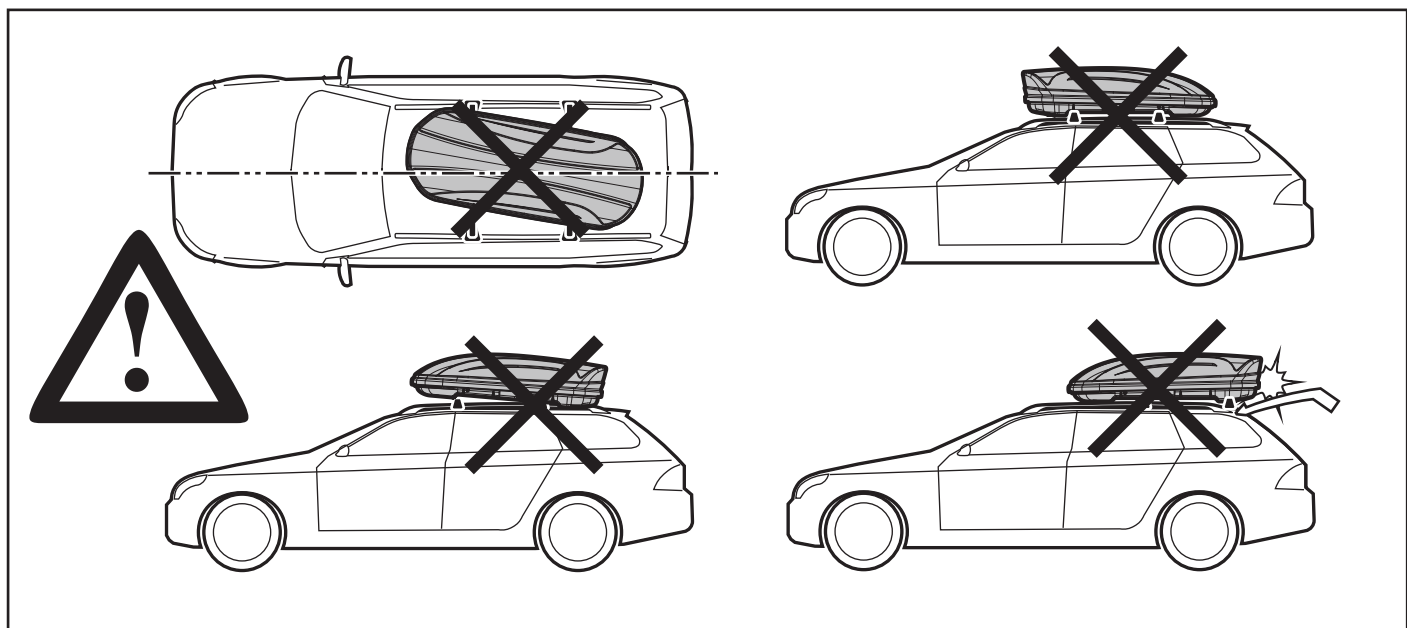

* 320 = 9 Kg 400 = 12 Kg 460 = 15 Kg 580 = 20 Kg

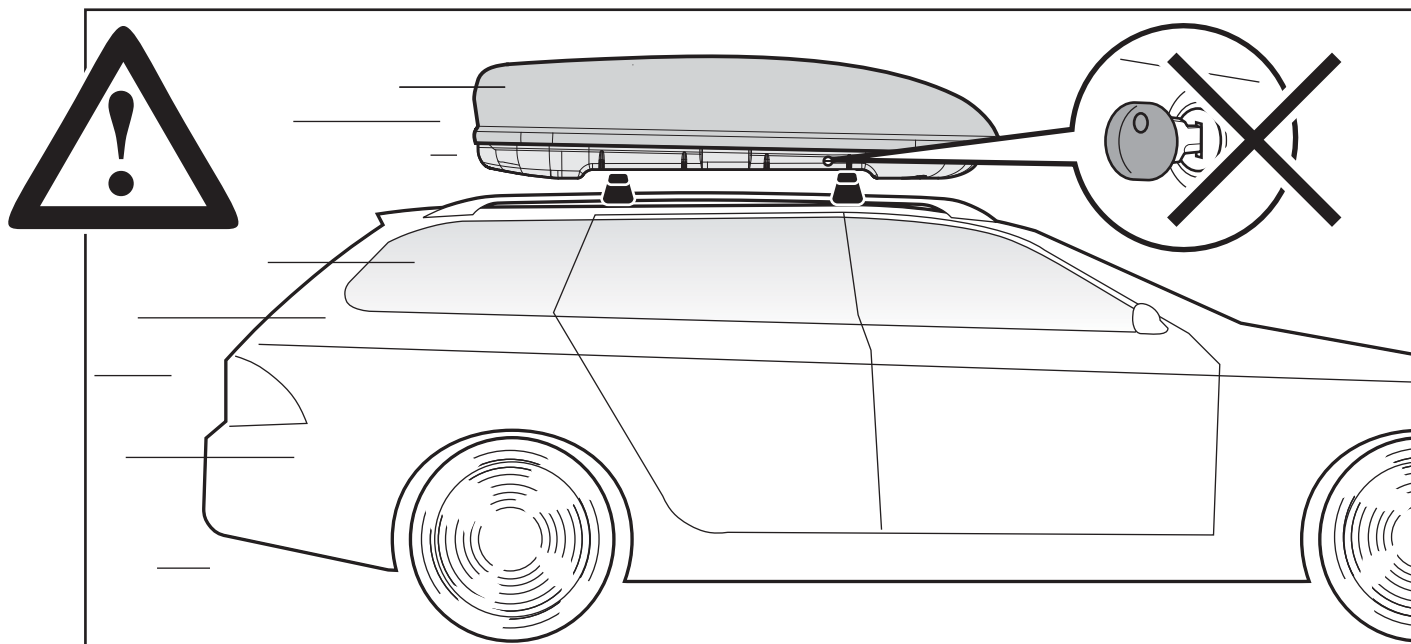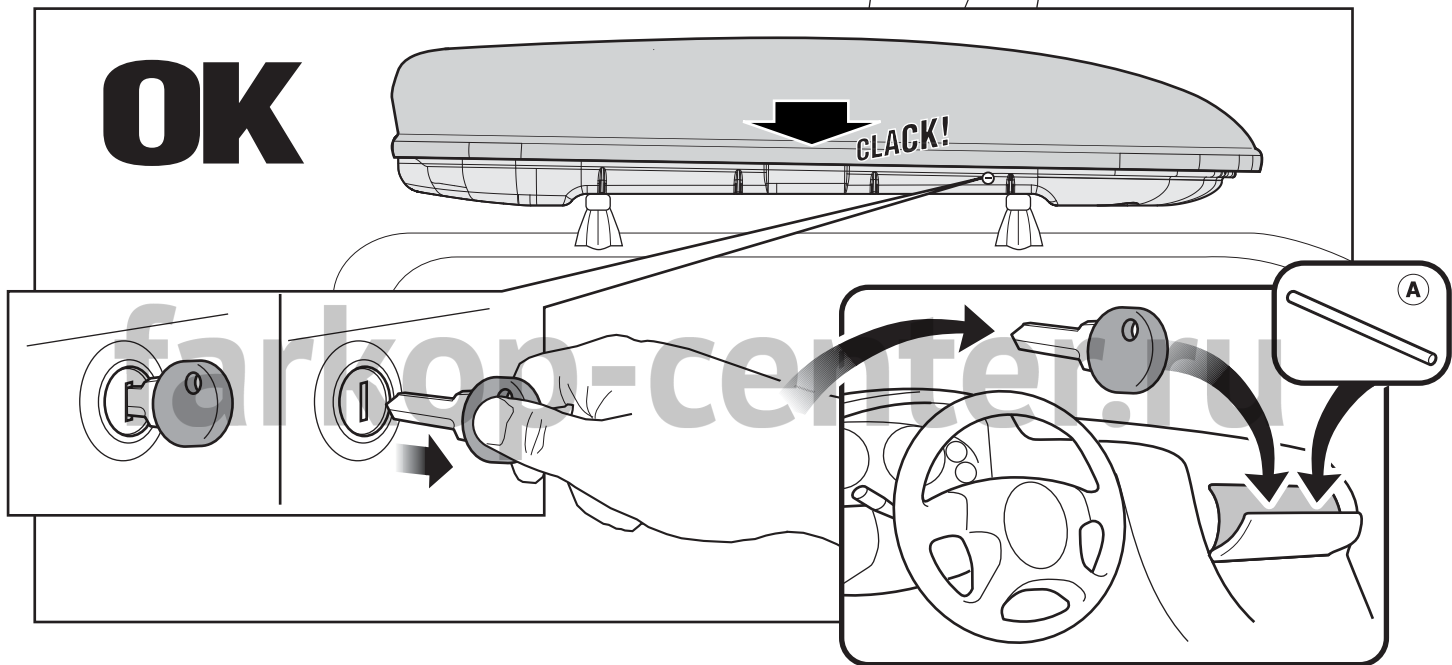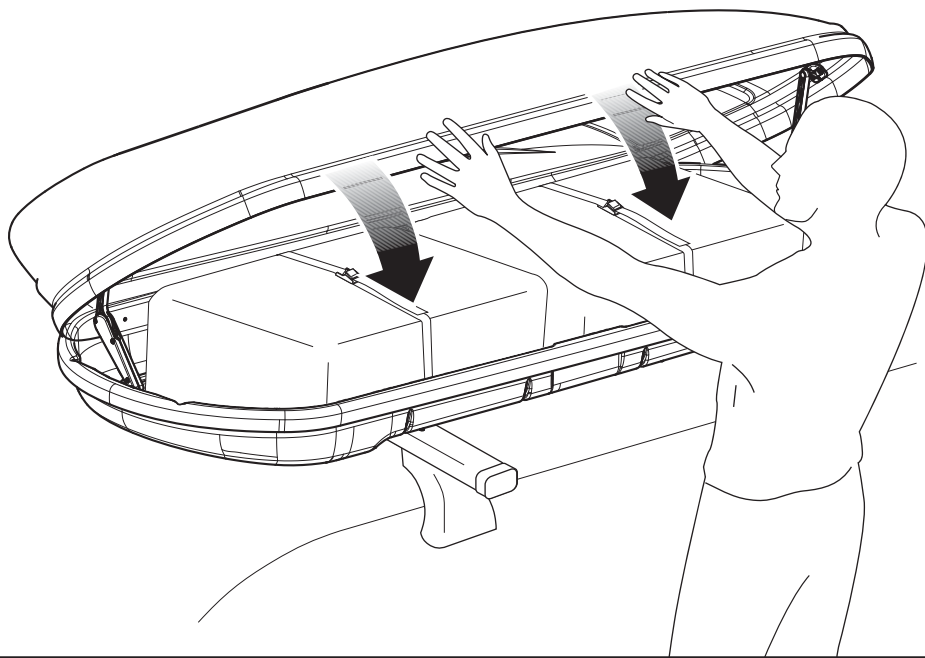

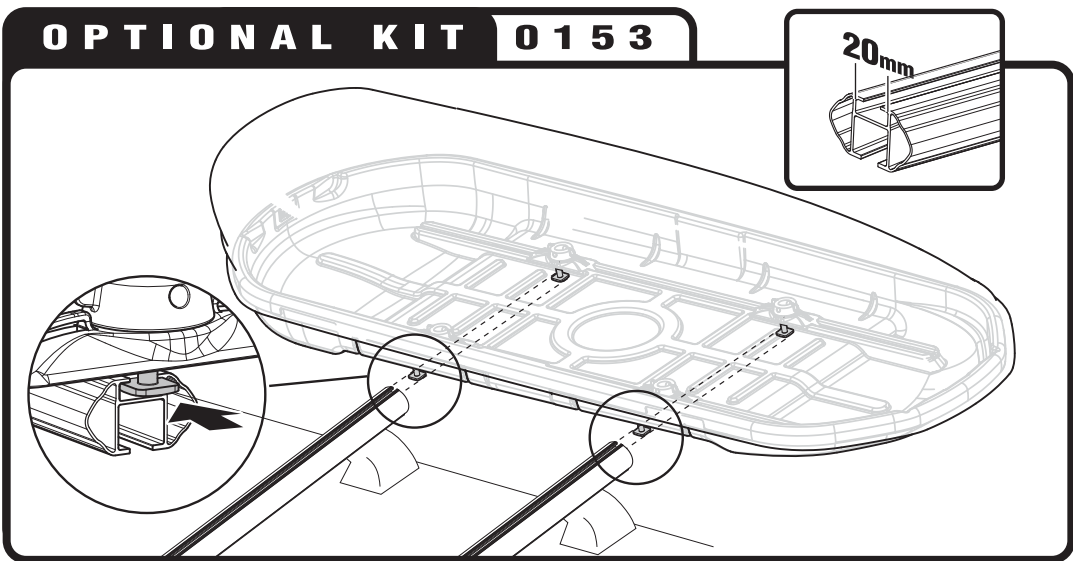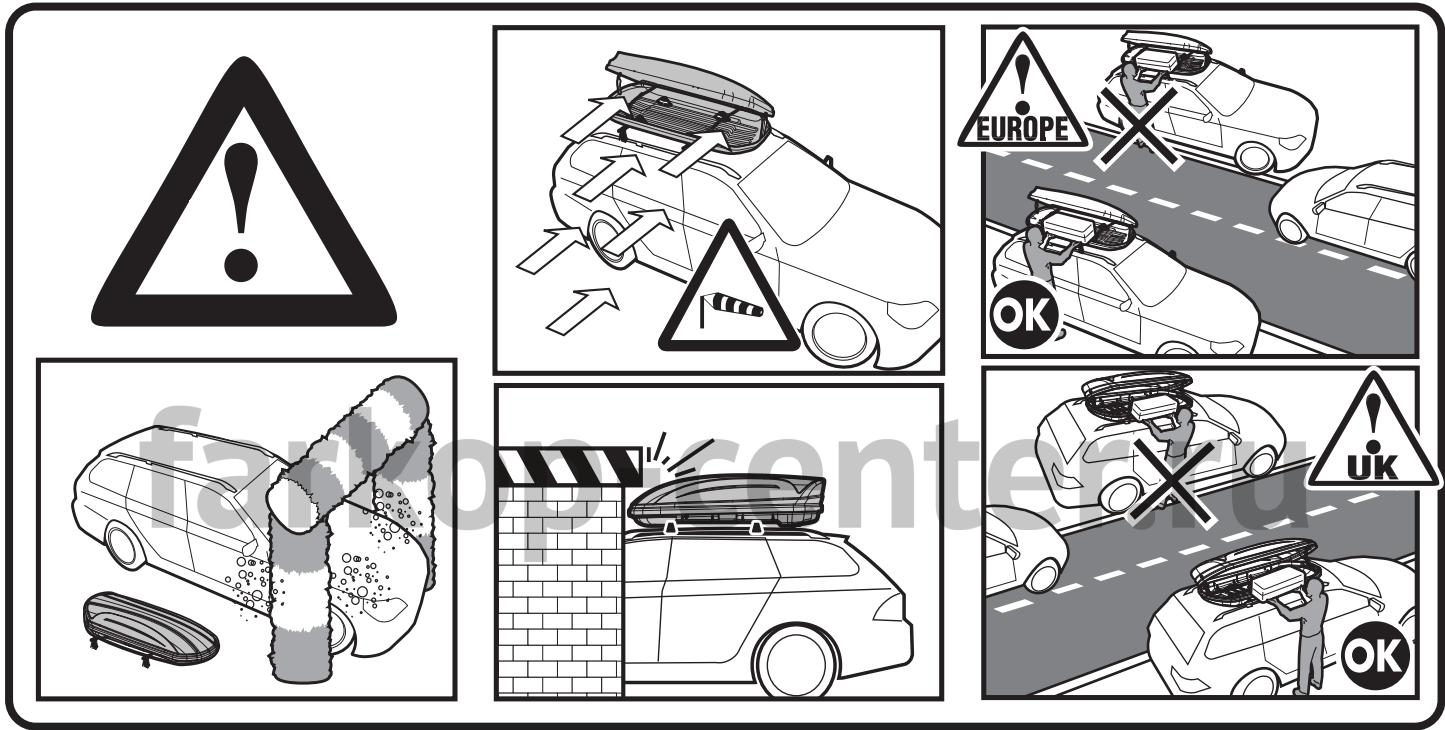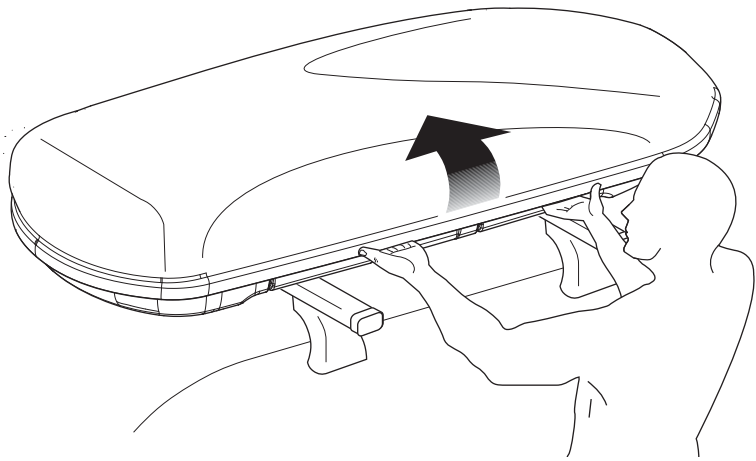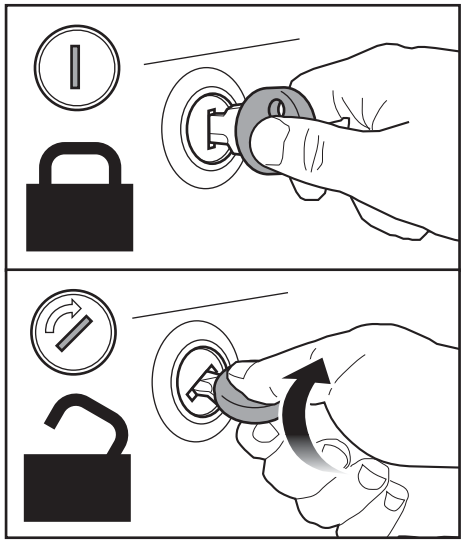

Cod. istr.	Data	Rev.	Creata da	Approvata da
F10507	22/04/2010	B	AS/LM	DM



F.I.I. MENABO s.r.l.
AUTOACCESSORI

Via 8 Marzo, 3 - Z.I. Corte tegge
42025 CAVRIAGO (RE) ITALY
Tel. +39-0522/942840 r.a. - 942798
Fax +39-0522/942948
e-mail: info@flli-menabo.it - <http://www.flli-menabo.it>